


QUICKDRAW 500

TRIPLE-ACTION VAPORIZER

Featuring a Smart-Cartridge System that precision heats three material types for the optimal delivery of rich, flavorful vapor, the QuickDraw 500 also boasts tailored temperature control, a large cartridge capacity, and long battery life. It's unmatched performance and cutting-edge design in one intuitive device.

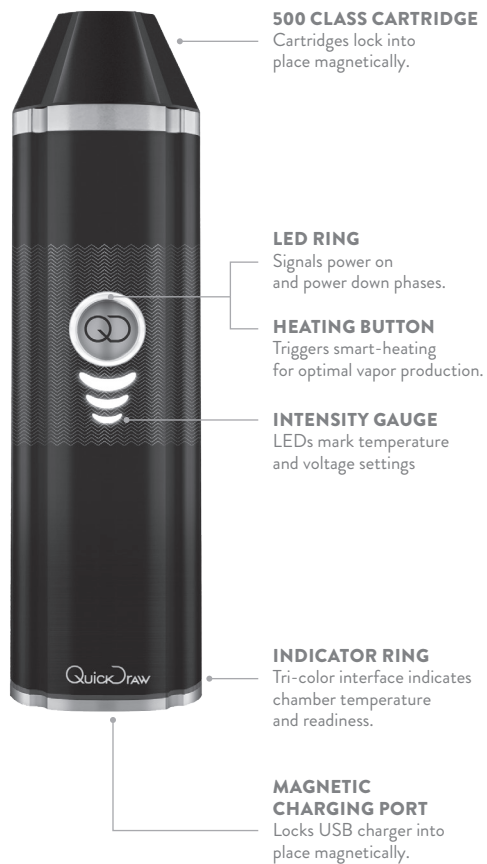

QuickDraw

500

TRIPLE-ACTION VAPORIZER

USER
GUIDE



HOLD YOUR FIRE™



WWW.HOLDYOURFIRE.COM

PREPPING THE QUICKDRAW 500



- 1 Unpack and fully charge device.



- 2 Unscrew cartridge mouthpiece and fill chamber.



- 3 Replace mouthpiece and slide cartridge into vaporizer chassis.



- 4 Press heating button 3 times to rapidly unlock device for use.

FAST CHARGING

To fully charge the QuickDraw 500 before use, attach the magnetic charger tip to the end of the device and insert the cord into a USB port. Both the LED and Indicator Ring will flash white to signal charging. The Indicator Ring will turn red intermittently while charging, and will turn green when the device is fully charged.

- LED Ring and Indicator Ring will begin a set of double blinks that dim off gradually when a recharge is needed.
- The QuickDraw 500 is specifically designed to allow use while charging.

UNLOCKING THE QUICKDRAW 500

The QuickDraw 500 is equipped with a 3-click battery lock to prevent unintentional activation. Pressing the heating button 3 times rapidly will unlock the device for use, which the LED Ring and Indicator Ring will signify by flashing.

To lock the QuickDraw 500, press the heating button rapidly in the same fashion. The Indicator Ring will flash red to signal the device is locked.

INTENSITY GAUGE



HIGH



MEDIUM



LOW

SETTING THE QUICKDRAW'S 500 VOLTAGE

The QuickDraw 500 has 3 different voltage settings for Liquid and Extract cartridges: 3.7 V, 4.2 V, and 4.7 V. Choosing a higher voltage setting on the QuickDraw 500 will produce more vapor.


- To set the voltage on the QuickDraw 500, rapidly press the heating button twice.
- Now in Voltage Setting mode, the LED lights below the heating button will cycle, indicating different voltage settings:
 - 3.7 V when the bottom LED glows;
 - 4.2 V when the bottom and middle LEDs glow;
 - 4.7 V when all three LEDs glow.
- To make your selection, press the heating button when the glowing LED(s) correspond with your desired voltage.

SETTING DRY CARTRIDGE TEMPERATURE

The QuickDraw 500 also has 3 temperature settings for its Dry Herb cartridge: 200C/390F (low), 210C/415F (medium), and 225C/440F (high).


- To select a temperature setting on the QuickDraw 500, rapidly press the heating button twice.
- Now in Temp Setting mode, the white LEDs below the heating button will begin to cycle.
 - Low temperature is activated when the bottom LED glows;
 - Medium temperature when the bottom and middle LEDs glow;
 - High temperature when all 3 LEDs glow.
- To make your selection, press the heating button when the glowing LED(s) correspond with your desired temperature.

CARTRIDGE PREPARATION AND USE

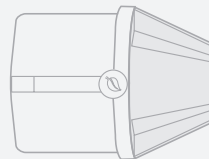


DRY

- Remove mouthpiece from cartridge body
- Place shredded dry herb loosely in chamber, below white chamber wall
- Replace mouthpiece and slide cartridge into vaporizer chassis
- If desired, set your preferred temperature (see instructions)
- Press and hold button for 3 seconds to begin precision heating
- As the QuickDraw 500 warms to temperature, Indicator Ring will glow red, then yellow, then green when ready for use
- Draw from mouthpiece, without pressing or holding button
- Press and hold button for 3 seconds to deactivate
- The QuickDraw 500 will auto-deactivate after 2 minutes to prevent undesired use

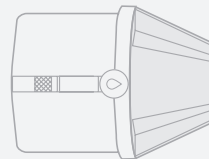

LIQUID

- Twist to remove mouthpiece from the cartridge
- Unscrew metal cap on the liquid tank
- Fill chamber with liquid, below overflow line
- While filling, hold cartridge at an angle to prevent liquid from entering central vapor path
- Reattach mouthpiece and slide cartridge into vaporizer chassis
- Press and hold button as you draw
- If held for longer than 10 seconds, the QuickDraw 500's Indicator Ring will flash before device shuts down, preventing undesired use

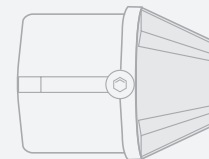

EXTRACT

- Unscrew mouthpiece from cartridge body
- Place extract in chamber, below overflow line
- Reattach mouthpiece and slide cartridge into vaporizer chassis
- Press and hold button for 3 seconds to begin heating. The light on the Indicator Ring will glow red at the beginning of the cycle.
- The QuickDraw 500 will auto-deactivate after 30 seconds to prevent undesired use

THE 3-CLICK LOCK

Please note: if your vaporizer doesn't light up when you press the button, it's most likely locked. Press the heating button three times rapidly to unlock it for use.

CARTRIDGE MAINTENANCE

The QuickDraw 500 comes equipped with a kit of cleaning and maintenance tools that should be used regularly to clear the device and its cartridges of debris. Regular cleaning will ensure long cartridge life.



PLEASE CONTACT QUICKDRAW'S EXPERT SUPPORT TEAM WITH ANY QUESTIONS OR CONCERNS.
1 (800) 591-3613

Visit HoldYourFire.com for product news and updates or to view QuickDraw's entire line of vaporizers and accessories.

QuickDraw

©2015 QD Products, LLC. QuickDraw, and the QuickDraw logo, are trademarks of QD Products, LLC. All rights reserved.